

Monochrome CCD Camera

WAT-902H2 ULTIMATE WAT-902H3 ULTIMATE

Operation Manual

This Operation Manual covers safety camera functions installation and the correct operating procedure for the WAT-902H2/3 ULTIMATE. First, we ask you to read this Operation Manual thoroughly, then install and operate the WAT-902H2/3 ULTIMATE as advised. In addition, for future reference, we also advise safekeeping of this manual.

Please contact the distributor or dealer from which the WAT-902H2/3 ULTIMATE was purchased, if you do not understand the installation, operation or safety instructions laid out in this manual. Not understanding the contents of the Operation Manual sufficiently may cause damage to the camera.

Guide to the Safety Symbols

The definitions of the symbols used in this operation manual are:



When you do not adhere to or take notice of the "Danger" sign, it may lead to a serious accident such as death or injury caused by fire or electric shock.

When you do not adhere to or take notice of the "Warning" sign, it Warning may cause severe damage such as a physical injury.

When you do not adhere to or take notice of the "Caution" sign, it Caution may incur injury and cause damage to peripheral objects in the immediate surroundings

Cautions for Safety

WAT-902H2/3 ULTIMATE is designed to be used safely; however, if not used safely, it may lead to a physical accident caused by fire and electric shock. Therefore, please keep and read the "Cautions for Safety" below for protection against accidents.

 Do not disassemble and/or modify the WAT-902H2/3 Danger ULTIMATE.

Do not operate the WAT-902H2/3 ULTIMATE with wet hands.

• Use a stabilized power adaptor designed for DC+12V±10%, ₩arning

Caution

with a current capacity of more than 250mA for the WAT-902H2/3 ULTIMATE.

The recommended voltage is DC+12V \pm 10%

• Do not expose the WAT-902H2/3 ULTIMATE to wetness or high moisture conditions.

The WAT-902H2/3 ULTIMATE is designed and approved for indoor use only. The WAT-902H2/3 ULTIMATE is not waterresistant or waterproof. If the location of the camera is outdoors or

in an outdoor like environment, we recommend that you use an outdoor camera housing. • Protect the WAT-902H2/3 ULTIMATE from condensation.

- Keep the WAT-902H2/3 ULTIMATE dry at all times during storage and operation.
- · Should the camera not work properly, switch off the power immediately. Then check the camera according to the "Problems and Trouble Shooting" section.

· Avoid the striking of hard objects or dropping the WAT-902H2/3 ULTIMATE.

- The WAT-902H2/3 ULTIMATE uses high guality electrical parts and precision components
- Do not connect any power supply directly to the video out terminal of the unit.

Do not connect the WAT-902H2/3 ULTIMATE with any monitor using a video/power single transmission terminal. The WAT-902H2/3 ULTIMATE is not designed for use with this type of equipment. We also advise you to read the operation manual of the monitor you plan to use before any connections are made.

• Do not install the WAT-902H2/3 ULTIMATE in a position subject to direct sunlight.

Sunlight shinning directly onto the WAT-902H2/3 ULTIMATE lens can cause damage to the CCD.

- Select a stable place for installation of the WAT-902H2/3 ULTIMATE.
- Use a support of durable strength around an installation position on a ceiling or wall when a camera stand or tripod is used.
- Do not move the WAT-902H2/3 ULTIMATE with the cables connected.
- Before moving the WAT-902H2/3 ULTIMATE, always remove the video cable and power cable from the rear of the camera first.

 Avoid using the WAT-902H2/3 ULTIMATE near any strong electromagnetic field.

After installing into main equipment, if the WAT-902H2/3 ULTIMATE is exposed to electromagnetic waves causing the monitored image to become distorted, we recommend the camera be shielded by appropriate protective casing.

Problems and Trouble Shooting

If any of the following problems occur when using the WAT-902H2/3 ULTIMATE.

- An optimal picture cannot be obtained, after checking that all the cables and connections are correctly in place
- Smoke or any unusual odor emerges from the WAT-902H2/3 ULTIMATE.
- An object becomes embedded or a quantity of liquid seeps into the camera housing
- More than the recommended voltage or/and amperage has been applied to the WAT-902H2/3 ULTIMATE by mistake
- Anything unusual occurring to any equipment connected to the WAT-902H2/3 ULTIMATE.

Disconnect the camera immediately according to the following procedures

①Switch off the main power supply to the camera.

- (2) Remove the power and video cables connected to the WAT-902H2/3 **UI TIMATE**
- ③Contact the distributor or dealer from which the WAT-902H2/3 ULTIMATE was purchased.

About EMC


The WAT-902H2/3 ULTIMATE is in conformity with EMC test standards carried out by authorized organizations in Japan.

- E I A FCC Part15 class B
- CCIR EN61000-6-3/EN50130-4


Do not modify the WAT-902H2/3 ULTIMATE. A modified camera Danger may not conform to EMC test standards.

Contents

Using the contents figures below, check to make sure all parts are present before use

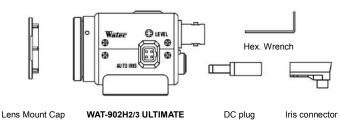

Description of Parts

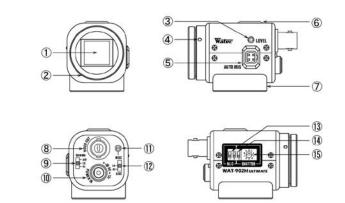

- ①CCD FRONT FACE
- The light receiving face of the CCD camera

(Dirt, water or oil deposits on the CCD will cause an unclear picture on the monitor. Attach the lens cap to protect the lens and CCD from contamination and damage.)

2LENS MOUNT

- Mount for the lens (Thread type)
- ③IRIS LEVEL VOLUME
- · By controlling the volume, the iris level of a DC iris lens can be adjusted. **(4)**FOCUSING ADJUSTMENT SCREWS
- There are 3 hex. adjustment screws each placed at intervals of 120° for fine
- focusing of the lens
- **⑤AUTO-IRIS SOCKET**
- This socket is for a video or DC auto-iris lens cable connector. (Video/DC: Auto selected by the camera)
- **©TRIPOD MOUNTING SCREW HOLES**
- Mounting holes for stands. The size of these threads are 1/4", 20 threads, 4.5 \pm 0.2mm, which is the same as any standard camera tripod (U1/4").
- (7)CAMERA BASE • The camera base has a thread for fixing to a standard tripod and four M3 size
- holes for additional easy fixing.
- ⑧VIDEO OUT (BNC)
 - The terminal for composite video signal output **9GAMMA CORRECTION SWITCH**
 - Three gamma values are selectable, 1.0, 0.45, 0.35.
- 10 POWER IN
 - . The terminal designed for the DC-plug of the power adaptor
- **MGC VOLUME ADJUSTING**
- The volume for setting manual gain control
- **(DAGC/MGC SELECTION SWITCH**
- Switch for setting AGC HI、LO or MGC
- **13BACK LIGHT**
- The switch for back light compensation
- **WELECTRONIC SHUTTER ON/OFF SWITCH**
- The switch for the selecting electronic shutter mode
- **(5)AF MODE CONTROL**
- . The switch for the shutter speed mode control according to the object being monitored

Power Supply

Use a stabilized power adaptor designed for DC+12V±10%, with a current capacity of more than 250mA.

Use the optional DC plug if the shape or polarity of the DC plug of the power adaptor to be used is not compatible with the camera (See the drawing on the right below).



The wiring on the connector must be exact. Be careful not to touch the other terminal while wiring. Protect the wiring portion by using insulation tape after wiring. If the above care and attention is not adhered to, damage to the WAT-902H2/3 ULTIMATE and power adaptor may occur and may also cause fire.




Auto-iris Lens

Before connecting the auto-iris lens, please make sure that the pin configuration is correct by confirming with the following table. If the configuration of your iris connector is different from the following, the plug and pins will need to be rewired

Pin No. EIAJ Video Auto-iris Lens Arrangement		EIAJ DC Auto-iris Lens Arrangement	
1	Power	Control –	
2	Not used	Control +	
3	Iris signals	Drive +	
4	Common (GND)	Drive —	

Camera Base

 There is a tripod mounting screw hole as shown in the diagram on the right In addition, there are 4 corners holes M3 size and one ϕ 5 for stability



Set-up and Operation

- 1) Ensure that the power to the WAT-902H2/3 ULTIMATE and the peripheral equipment is turned off before making any connections.
- 2) Remove the lens mount cap from the WAT-902H2/3 ULTIMATE and attach the CS-mount lens. Use the optional C-mount adaptor (30CMA-R) when a C-mount lens is used
- 3) Connect the iris control cable to ⑤AUTO-IRIS SOCKET on the WAT-902H2/3 ULTIMATE when an auto-iris lens is being used.
- 4) Connect ⑧VIDEO OUT on the WAT-902H2/3 ULTIMATE with the monitor, using a coaxial cable with 75 Ω impedance, such as an RG-59 or an RG-6/U. Select a monitor with the same television system as the WAT-902H2/3 ULTIMATE: EIA or CCIR. A monitor with more than 600TV lines is recommended
- 5) Insert the power plug of the power adaptor into ^(III) POWER IN on the back panel of the WAT-902H2/3 ULTIMATE. Confirm that the power adaptor is not connected to the power supply before insertion of the power plug into 10 POWER IN.
- 6) Turn on the power to the WAT-902H2/3 ULTIMATE, monitor and all other allied equipment. When a picture cannot be obtained on the monitor, or a problem occurs, check and follow the procedure mentioned in the Problems and Trouble Shooting] section.

7) After following the procedure below and the picture is still out of focus, open the iris fully and loosen ④FOCUSING ADJUSTMENT SCREWS with the hex. wrench and move the lens forwards until a clear picture is obtained.

Manual Lens	Adjust the focus and iris to the best position on the lens.
Video Auto-iris Lens	Adjust the focus on the lens.
DC Auto-iris Lens	Adjust the iris level on the camera, then adjust the focus on the lens. See below.

Iris Level Adjustment (for DC auto-iris lenses only)

Adjust ③IRIS LEVEL VOLUME placed on the side of the unit until an acceptable light level is attained. No change will occur if a video iris lens or manual iris lens is fitted



8) Select any required gamma by the **9GAMMA CORRECTION SWITCH**.

Mode	Gamma	Effect
OFF	1.0	Required for image processing such as data storage for PCs and for FA.
LO	0.45	Standard setting for using TVs and Monitors. Natural images can be obtained in dark areas.
н	0.35	Dark areas can be lightened and bright areas can be reduced.

Select LO position for normal use. In a low light environment or dark viewing. HI mode is recommended.

% The switch is set to LO(γ	≒0.45) upon shipment.
-------------------------------------	-----------------------

9) Select any required gain control by the @AGC/MGC SELECTION SWITCH.


Mode	Range	Effect	
MGC	5 - 60dB	 In a low light environment, when illumination of the object is important, increase the manual gain. Lower the gain control for a clearer picture with less noise. (Factory automation or Image processing) 	
AGC HI	5 - 60dB	When minimum illumination is more important than the S/N ratio (Surveillance in a low light environment)	
AGC LO	5 - 32dB	 When SN ratio is more important than minimum illumination. When adequate lighting is present or a stable lighting condition is available. 	

it is set to LO(5-32dB) upon shipment. It is set to LO(5-32dB) where a shipment. It is set to LO(5-32dB) where a shipment is set to LO(5-32dB) wh

10) Set the gain to any required environment by MGC VOLUME ADJUSTING. Manually adjusted in a range between 5 to 60dB. In a low light environment, when illumination of the object is important, increase the manual gain. Lower the gain control for a clearer picture with less noise.

%The volume is set to L(Min.) upon shipment.

11) Select any required back light area by (3)BACK LIGHT to one of its 4 positions.

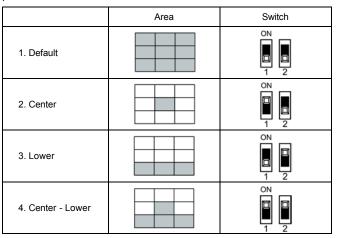

※The switches are set to OFF(Default) upon shipment.

12) Set the shutter mode by (BLECTRONIC SHUTTER ON/OFF SWITCH When shutter mode is OFF, fix the shutter speed to EIA1/60, CCIR1/50. When shutter mode is ON, select the shutter speed mode by (BAE MODE CONTROL.

※The switch is set to OFF upon shipment.

13) Select any required shutter speed by the ^(f)AE MODE CONTROL to one of its 10 positions.

No.	Mode	Shutter Speeds (Sec.)				
NU.	Wode	EIA	CCIR			
0	FL	1/100	1/120			
1	ES	1/250				
2	ES	1/500				
3	ES	1/1000				
4	ES	1/2000				
5	ES	1/5000				
6	ES	1/10000				
7	ES	1/100000				
8	EI: OFF	1/60-1/100000	1/50-1/100000			
9	EI: FL	1/100-1/100000	1/120-1/100000			

 Man intense light may leave a trail on the screen longitude. This smearing is a natural phenomenon and is not due to equipment failure or fault.
 The dial is set to 0(FL) upon shipment.

Options

To purchase these options, please contact the distributor or dealer from which you purchased the WAT-902H2/3 ULTIMATE.



C-mount Adaptor (30CMA-R)

This lens mount adaptor is used to convert a CS-mount to a C-mount.



Mini Stand (MS50)

A convenient stand for the WAT-902H2/3 ULTIMATE. With this stand, the camera can be adjusted to any desired angle.

Specifications

- Design and specifications are subject to change without notice.
- Watec is not responsible for any inconvenience or the attendant damages to the video and monitoring recording equipment caused bymisuse, misoperation or improper wiring of our equipment.
- If for any reason the WAT-902H2/3 ULTIMATE does not work properly, or if you have any questions regarding installation or operation, please contact the distributor or dealer from which it was purchased.

Contact information Watec Co., Ltd. Add.: 254-2 Nihonkoku, Daihoji, Tsuruoka- Shi, Yamagata-Ken, 997-0017 Japan

TEL: +81-235-23-4400 FAX: +81-235-23-4409 E-mail: info-o@watec.co.jp URL: http://www.watecco.jp

1340Z17-Y2000002